

Service Manual PM-220

2 HP Automatic Control

Rev 5 - 1-13-20 900-067M

Installation

- Place the shipping carton in the desired location. Remove the unit from the shipping carton.
- 2. Cut out a 5-1/2" x 1-3/4" hole in the panel or wall for the unit.
- 3. Insert the umbilical tubing in first and follow with the unit.
- Place the faceplate flush against the panel, level and secure the unit with 4 screws.
- 5. Mount the holder bar with holders below the unit faceplate.



NOTE

This unit requires a regulated air and water supply. Filters are highly recommended.

- 6. Install optional master valve assemblies, with filter and regulator, onto the manual shut-off valves. (Pressures are preset at the factory: 80 psi air, 40 psi water).
- 7. Connect the supply tubings to the appropriate air and water supply lines.

Final Adjustments

Check air pressure, adjust to 80 psi if necessary. Check water pressure, adjust to 40 psi if necessary. Test handpieces for proper function.


Test syringe for proper pressure and function.

- Operation 1. Turn on the master switch located on the right side of the faceplate. The handpiece is automatically activated when lifted from the holder.
 - 2. Depress the foot control to activate each handpiece. Pressure is shown on the gauge for the handpiece being used.
 - 3. Individual handpiece pressure adjustments are located on the flow control block inside the unit. Remove the unit to access the flow control block. To adjust the pressure to each handpiece:
 - a. Turn adjustment screw *clockwise* to decrease the handpiece pressure.
 - b. Turn adjustment screw counter-clockwise to increase the handpiece pressure.

CAUTION

When adjusting the handpiece pressure, do not overtighten the screws. Damage may result.

- 4. Handpiece coolant water can be turned on or off with the toggle switch located on the left side of the faceplate.
- 5. Water coolant flow adjustment is located to the right of the water coolant toggle switch.

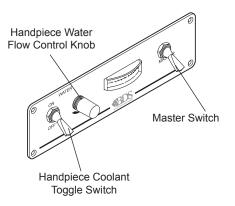

Control Panel PM-220

Troubleshooting

Symptom Handpiece lacks power.

Possible Causes

- A. Improper supply pressure from compressor (80 psi).
- B. Check handpiece pressure adjustment on unit.
- C. Air filter may be plugged.
- D. Pinched supply tubing.
- E. Defective handpiece gasket at connection with tubing.
- F. Defective handpiece.

Symptom

Water coolant does not shut off when foot control is released.

Possible Causes

- A. Adjust air pressure to 80 psi—water pressure to 40 psi.
- B. Foot control is not exhausting.
- Defective water relay valve.

Symptom

More than one handpiece is operating.

Possible Causes

- A. Handpiece is not all the way in the holder.
- B. Improper adjustment on pilot valve in the handpiece holder.
- C. Defective shuttle valve to gauge.

Symptom

Insufficient water coolant.

Possible Causes

- A. Adjust coolant flow valve.
- B. Water filter may be plugged.
- C. Handpiece may be plugged.
- D. Pinched supply tubing.
- E. Improper adjustment of water relay valve

Symptom

Water coolant is running from handpiece while in the holder.

Possible Causes


- A. Water pressure too high.
- B. Air pressure too low.
- C. Handpiece holder out of adjustment.

Symptom


Water coolant is running continuously.

Possible Causes


- A. Purge switch is on (on applicable systems).
- B. Water pressure to high.
- C. Handpiece holder out of adjustment.
- D. Defective water relay valve.

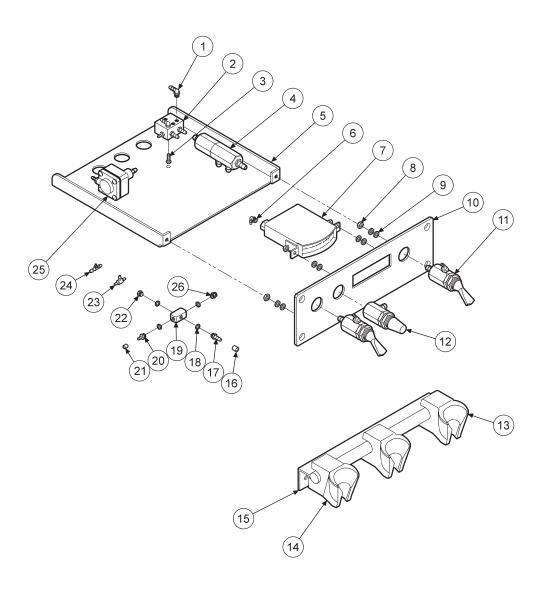


ı	ITEM	PART DESCRIPTION PART NUMBER	QTY	ITEM	PART DESCRIPTION PART NUMBE	R QTY	ITEM	PART DESCRIPTION PART NUMBER QTY
ı	1	Plastic Elbow, 1/8" 022-038	2	10	Faceplate101-02	7 1	19	4-way Cross 023-008 1
ı	2	Handpiece Adjustment Block 113-021	1	11	3-way Toggle Valve120-00	0 2	20	Barb, 10-30 x 1/16" 022-009
ı	3	Screw, 10-32 x 3/8" 001-070	1	12	Needle Valve121-00	6 1	21	Ferrule, 1/8" 117-007
ı	4	Routing Valve 014-007	1	13	Universal Handpiece Holder 141-02	3 24	22	Plug, 10-32 001-001 1
ı	5	Chassis 101-071	1	14	Automatic Handpiece Holder 122-05	5 1	23	Shuttle Vlave 014-012 1
ı	6	Plastic Elbow, 1/16" 022-039	3	15	Holder Bar 1/2"141-05	2 1	24	Plastic Tee, 1/8" x 1/16" x 1/8" 022-049 1
ı	7	Gauge 026-003	1	16	Ferrule, 1/4" 117-00	8	25	Water Relay 123-000 1
ı	8	Nut, 4-40 002-017	4	17	Barb, 10-30 x 1/8" 022-01	0	26	Union 022-001 1
П	9	Washer, Flat, #6	8	18	Plastic Washer, 1/4" 003-00	1		

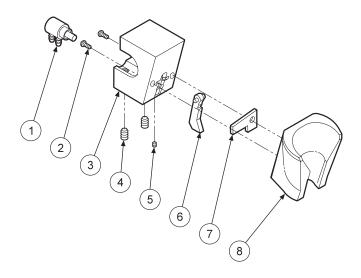


QTY
1
1
2
1
2
1
1
1
1

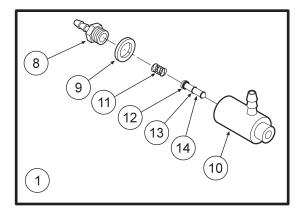

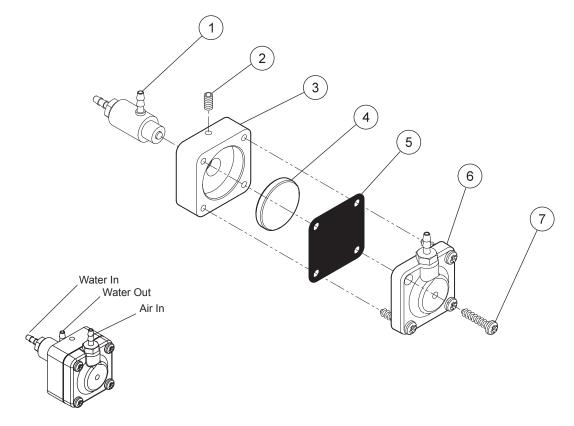


Water Relay Valve 123-000

ITEM	PART DESCRIPTION PART NUMBER	QTY
1	Cartridge Body Assembly123-018	1
2	Set Screw, 4-40 x 5/8"005-028	1
3	Body123-013	1
4	Piston123-014	1
5	Diaphragm127-031	1
6	Cap123-012	1
7	Screw, #6 x 1/2"001-267	4
8	Barb, 10-32 x 1/16"022-009	1
9	Plastic Washer, 1/4"003-001	1
10	Valve Body123-017	1
11	Spring008-011	1
12	O-Ring, 002017-502	1
13	O-Ring, 001 017-501	2
14	Stem 123-015	1

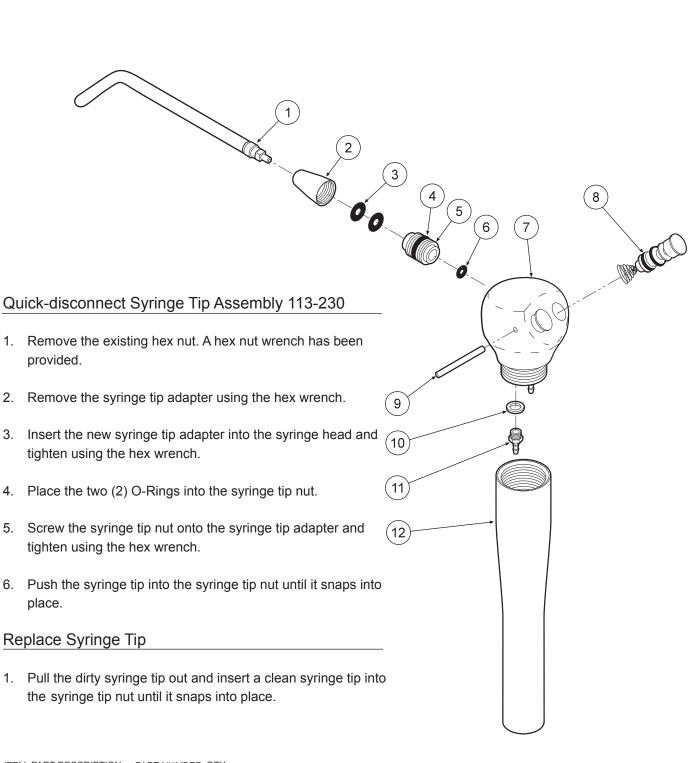


ITEM	PART DESCRIPTION	PART	NUMBER	QTY
1	Syringe Tip		113-030	1
2	Syringe Tip Nut		113-402	1
3	O-Ring, 006		017-006	2
4	O-Ring, 228-040		017-023	1
5	Syringe Tip Adapter		113-227	1
6	O-Ring, 003		017-003	1
7	Syringe Head		113-405	1
8	Syringe Button Repair Ki	t	113-403	2
9	Pin, Syringe Cartridge		113-008	1
10	Plastic Washer, 8-32		003-030	2
11	Barb, 8-32 x 1/16"		022-040	2
12	Syringe Handle		113-236	1


2.

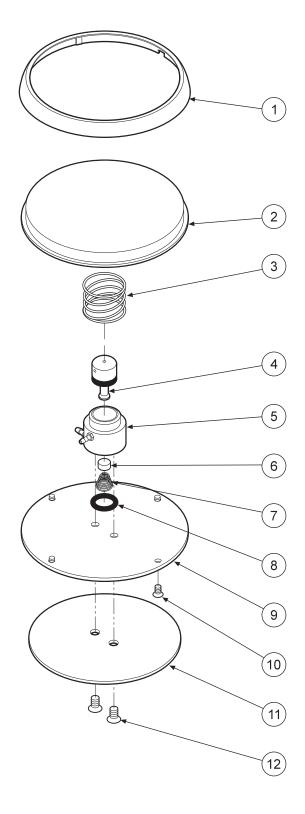

ITEM	PART DESCRIPTION	PART NUMBER	QTY
1	Ring	126-202	1
2	Cover	126-201	1
3	Spring	008-005	1
4	Stem (Includes 017-01)	2 o-ring)1.26-005	1
5	Body	126-004	1
6	Poppet	126-006	1
7	Spring	008-006	1
8	O-Ring, 013	017-013	1
9	Baseplate	126-003	1
10	Screw, 4-40 x 1/4"	001-005	4
11	Rubber Pad	126-007	1
12	Screw, 6-32 x 1/4"	001-004	2

2 Handpiece Automatic PM-220

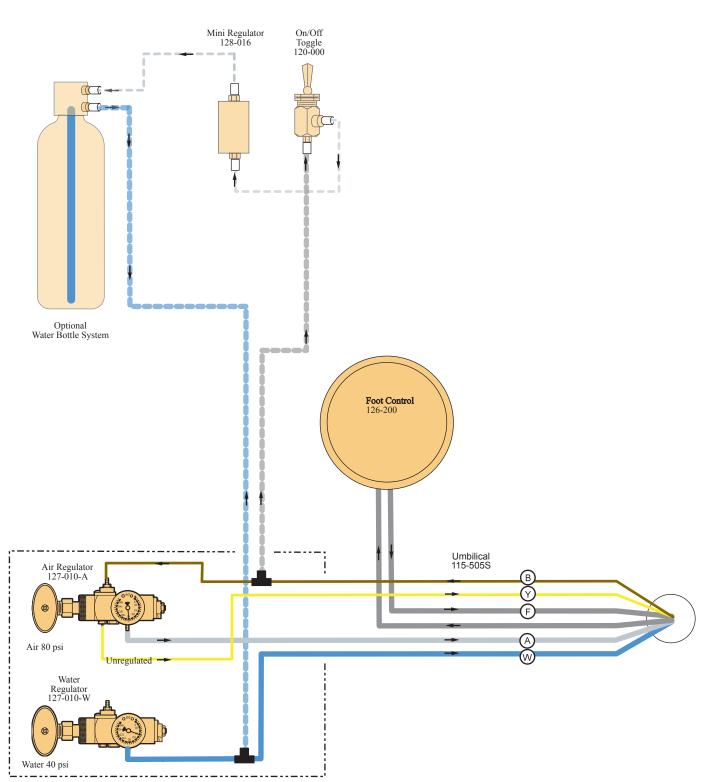

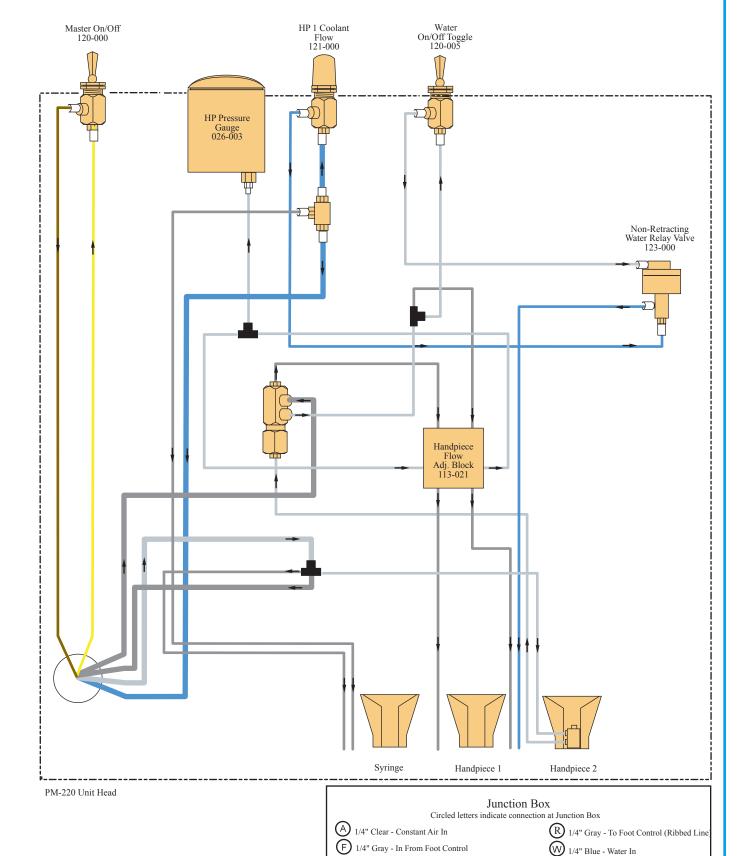

R 1/4" Gray - To Foot Control (Ribbed Line)

W 1/4" Blue - Water In

Optional Utility Center

Chip Air Option Wet Dry Option 1/8" Gray 1/4" Gray 1/8" Clear 1/4" Clear

1/8" Blue 1/4" Blue

1/8" Brown

1/8" Yellow

BDS warranties its product to be free of defects in material and workmanship for SEVEN FULL YEARS from the date of purchase on all units. Auto-blocks and standard foot controls are covered by a LIFETIME warranty when factory installed as part of a complete dental system. Upholstery has a TWO YEAR warrany and does not cover normal wear, stains, cuts or tears. Our LED lights have a FIVE year Warranty and our halogen light has a ONE year Warranty. Operatory chair motors feature a TEN year warranty. All warranty is limited to repair or replacement by BDS. Products returned to the factory and determined to be defective will be repaired or replaced free of charge at discretion of BDS. The warranty does not cover light bulbs, electrical components and trimmed or installed tubing. BDS reserves the right to void all warranties if any product is installed by other than an authorized technician. BDS' warranty does not cover damage to any surface finish, including but not limited to, discoloration or abrasion from cleaners, disinfectants or light sources. No claim for labor or consequential damages will be allowed. Return items must include a copy of the invoice or packing slip as proof of purchase.

Beaverstate Dental Inc. 115 S. Elliott Rd. Newberg, OR 97132 800-237-2303 503-538-8756 503-538-2845 Fax www.beaverstatedental.com